

'Click' to download complete Manual



Learning ♦ Knowledge ♦ Performance

FIERY E-7000 SERVICE MANUAL

Gestetner **LANIER** **RICOH** **SAVIN**

service-repairmanual.com

It is the reader's responsibility when discussing the information contained within this document to maintain a level of confidentiality that is in the best interest of Ricoh Corporation and its member companies.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED IN ANY FASHION AND DISTRIBUTED WITHOUT THE PRIOR PERMISSION OF RICOH CORPORATION.

All product names, domain names or product illustrations, including desktop images, used in this document are trademarks, registered trademarks or the property of their respective companies.

They are used throughout this book in an informational or editorial fashion only and for the benefit of such companies. No such use, or the use of any trade name, or web site is intended to convey endorsement or other affiliation with Ricoh products.

WARNING

The Service Manual contains information regarding service techniques, procedures, processes and spare parts of office equipment distributed by Ricoh Corporation. Users of this manual should be either service trained or certified by successfully completing a Ricoh Technical Training Program.

Untrained and uncertified users utilizing information contained in this service manual to repair or modify Ricoh equipment risk personal injury, damage to property or loss of warranty protection.

Ricoh Corporation

LEGEND

PRODUCT CODE	COMPANY			
	GESTETNER	LANIER	RICOH	SAVIN
G815	Fiery E-7000			

DOCUMENTATION HISTORY

REV. NO.	DATE	COMMENTS
*	08/2005	Original Printing

Read this "Safety Information" carefully before you use this product.
For safety, please follow the instructions in information slip.

SAFETY INFORMATION

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

WARNING

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

WARNING

- Connect the power cord directly into a wall outlet and never use an extension cord.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.

CAUTION

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the plug from the wall outlet, always pull the plug (not the cable).
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

 ACHTUNG (Deutsch)
<ul style="list-style-type: none">• Die batterie darf nur durch eine des gleichen Typs ersetzt werden, da anderenfalls Explosionsgefahr besteht.• Sie die debrauchten Batterien entsprechend den gegebenen Anweisungen.

Power Cord Precautions:

To reduce the risk of electric shock or damage to the equipment:

- User the appropriate power cord which was set up by your manufacturer's authorized service provider.
- Do not place objects on AC power cords or cables. Arrange them so that no one may accidentally step on or trip over them.
- Do not pull on a cord or cable. When unplugging from the electrical outlet, grasp the cord by the plug.
- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.

Power Supply:

The socket-outlet shall be installed near the product and shall be easily accessible.

Netzanschluss: (Deutsch)

Die Wandsteckdose sollte in der Nähe Geräts installiert und leicht zugänglich sein.

Warning:

Use of controls, adjustment or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

IMPORTANT SAFETY NOTICES

PREVENTION OF PHYSICAL INJURY

1. Before disassembling or assembling parts of the controller, make sure that the AC power cord is unplugged.
2. The wall outlet should be near the controller and easily accessible.
3. Note that some components of the controller are supplied with electrical voltage even if the main power switch is turned off.
4. If any operation check has to be made with exterior covers off while the main switch is turned on, keep hands away from electrified or mechanically driven components.




OBSERVANCE OF ELECTRICAL SAFETY STANDARDS

1. The controller must be installed and maintained by a customer service representative who has completed the training course on the controller.
2. The danger of explosion exists if the battery on the motherboard is incorrectly replaced. Replace the battery only with the equivalent type recommended by the manufacturer. Discard the used motherboard battery in accordance with the manufacturer's instructions and local regulations.

SAFETY AND ECOLOGICAL NOTES FOR DISPOSAL

1. Dispose of replaced parts in accordance with local regulations.
2. When keeping used lithium batteries in order to dispose of them later, do not put more than 100 batteries per sealed box. Storing larger numbers or not sealing them apart may lead to chemical reactions and heat build-up.

This manual uses several symbols.

Symbol	What it means
	Refer to section number/document
	Screw
	Connector

Trademarks

- Windows ® are registered trademarks of Microsoft Corporation in the United States and /or other countries.
- Fiery ® is a registered trademark of Electronics For Imaging, Incorporated.
- PostScript ® is a registered trademark of Adobe Systems, Incorporated.
- Ethernet ® is a registered trademark of Xerox Corporation.
- Macintosh ® is a registered trademark of Apple Computer, Incorporated.
- Pentium ® is a registered trademark of Intel Corporation.
- Other product names used herein are for identification purposes only and may be trademarks of their respective companies. We disclaim any and all rights involved with those marks.

TABLE OF CONTENTS

1	INSTALLATION	1-1
1.1	INSTALLATION REQUIREMENTS	1-1
1.1.1	ENVIRONMENT	1-1
1.1.2	MACHINE LEVEL.....	1-1
1.1.3	MINIMUM SPACE REQUIREMENTS	1-2
1.1.4	POWER REQUIREMENTS	1-2
1.2	INSTALLATION FLOW CHART	1-3
1.3	MACHINE INSTALLATION.....	1-4
1.3.1	SETTING CUSTOMER EXPECTATIONS.....	1-4
1.3.2	UNPACKING THE E-7000	1-5
1.3.3	FRONT AND BACK PANELS.....	1-6
1.3.4	CONNECTING E-7000 TO THE COPIER.....	1-7
1.3.5	STARTUP AND INITIAL SETUP	1-9
1.3.6	VERIFYING THE CONNECTION (LOCAL TEST PRINT).....	1-12
1.3.7	VERIFYING CONNECTION TO THE NETWORK	1-13
1.4	INSTALLING OPTIONAL FEATURES	1-14
1.4.1	OVERVIEW	1-14
1.4.2	ACTIVATE / DEACTIVATE AN OPTIONAL FEATURE USING A DONGLE	1-15
2	GENERAL OPERATIONS FOR SERVICING.....	2-1
2.1	START-UP, SHUT-DOWN, AND REBOOT PROCEDURES.....	2-1
2.1.1	STARTING THE COPIER AND THE E-7000	2-1
2.1.2	SHUTTING DOWN THE COPIER AND THE E-7000.....	2-2
2.1.3	SHUTTING DOWN THE E-7000 ONLY	2-2
2.1.4	RESTARTING THE E-7000.....	2-3
2.1.5	REBOOTING THE E-7000	2-3
2.2	CANCELLING THE CURRENT PRINT JOB	2-4
2.3	PRINTING THE CONFIGURATION SHEET OR TEST SHEETS.....	2-4
2.4	RUNNING THE E-7000 SETUP	2-5
2.4.1	TO ACCESS THE SETUP MENU	2-5
2.4.2	TO EXIT FROM THE SETUP MENU	2-5
3	REPLACEMENT	3-1
3.1	GENERAL CAUTION	3-1
3.2	NAMES OF MAIN PARTS/UNITS	3-2
3.3	COVER REMOVAL	3-3
3.3.1	SIDE COVER FOR THE E-7000	3-3
3.4	UNIT REMOVAL.....	3-4
3.4.1	VIDEO BOARD.....	3-4
3.4.2	DIAGNOSTIC LED BOARD	3-5
3.4.3	HARD DISK DRIVE (HDD).....	3-5
3.4.4	POWER SUPPLY UNIT	3-6
3.4.5	FAN	3-6
3.4.6	MOTHERBOARD	3-7
3.4.7	MEMORY - 512 MB DIMM	3-8

3.4.8 CPU AND COOLING ASSEMBLY	3-8
3.4.9 LITHIUM BATTERY	3-10
3.4.10 EXTENSION CARD	3-10
4 SOFTWARE MAINTENANCE	4-1
4.1 GENERAL NOTES AND CAUTIONS	4-1
4.2 CLEARING THE QUEUED PRINT JOBS IN THE E-7000	4-2
4.3 RESTORING THE E-7000 TO FACTORY DEFAULTS	4-3
4.4 SYSTEM SOFTWARE INSTALLATION PROCEDURE	4-4
4.4.1 OVERVIEW	4-4
4.4.2 INSTALLING SYSTEM SOFTWARE OVER THE NETWORK PORT	4-5
4.4.3 INSTALLING SYSTEM SOFTWARE USING A USB FLASH DRIVE	4-8
4.5 PATCH INSTALLATION PROCEDURE	4-10
5 TROUBLESHOOTING	5-1
5.1 OVERVIEW	5-1
5.2 LED DIAGNOSTIC CODES	5-2
5.3 ERRORS AND SUGGESTED ACTIONS	5-6
5.3.1 START-UP PROBLEMS	5-6
5.3.2 SYSTEM PROBLEMS	5-8
5.3.3 SYSTEM SOFTWARE INSTALLATION	5-9
5.3.4 NETWORK PROBLEMS	5-10
5.3.5 PRINTING PROBLEMS	5-11
5.4 TESTING THE VOLTAGE SUPPLIES	5-16
6 DETAILED SECTION DESCRIPTIONS	6-1
6.1 BLOCK DIAGRAM AND FUNCTIONS	6-1
6.2 PRINT DATA PROCESSING	6-3
6.2.1 FLOW CHART	6-3
6.2.2 MULTI-COPY PRINT JOBS	6-3
7 SPECIFICATIONS	7-1
7.1 GENERAL SPECIFICATIONS	7-1
7.2 SUPPORTED PAPER SIZES	7-3
7.3 SUPPORTED MEDIA TYPES	7-4